

## MC33-LT to MC64-LT Industrial Shock Absorbers

**Extreme low temperatures**

**Self-compensating, use at -50 °C to +66 °C**


**Energy capacity 170 Nm/cycle to 5,650 Nm/cycle**

**Stroke 23.1 mm to 150 mm**

**MC33EUM-LT**

**MC45EUM-LT**

**MC64EUM-LT**

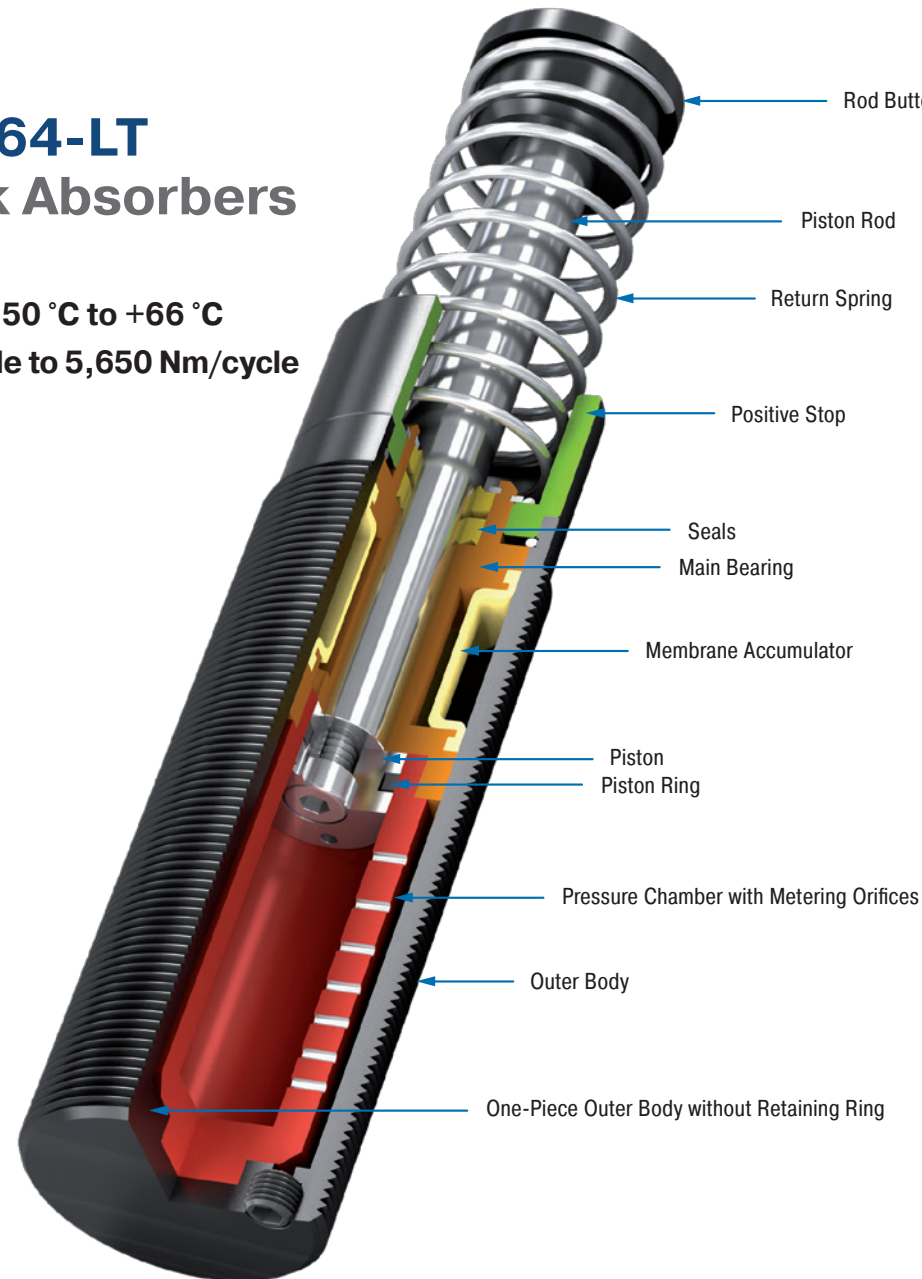

The identification numbers listed are the respective standard units of the corresponding shock absorber series. Special types can have deviating identification numbers.

Table of contents	Page
General instructions.....	2
Safety information .....	2
Intended use.....	2
Description and function.....	2
Calculation and design .....	2
Delivery and storage .....	2
Maintenance and care .....	2
Disassembly and disposal.....	2
Mounting instructions.....	3 - 8
Warranty .....	9
Expected service life .....	9
Technical data.....	9

## General instructions


This manual is for the disruption-free use of the product types listed on page 1; its compliance is a prerequisite for the fulfilment of any warranty claims.

Therefore, make sure to read this manual before use.


Please always maintain the specified limits from the performance table (technical data). Take into account the predominant environmental conditions and restrictions. Note the regulations of the trade association, TÜV or corresponding national, international and European regulations. Installation and commissioning only according to mounting instructions.

the entire stroke. A requirement for a constant rate of deceleration is the correct calculation of the industrial shock absorber and therefore the correct selection of the right metering orifice pattern or the right hardness level of the shock absorber. The hardnesses are graded from -0 (soft) to -4 (hard).

## General Function

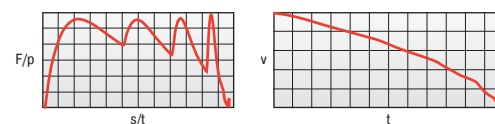

F = Force (N)    p = Internal pressure (bar)    s = Stroke (m)  
t = Deceleration time (s)    v = Velocity (m/s)

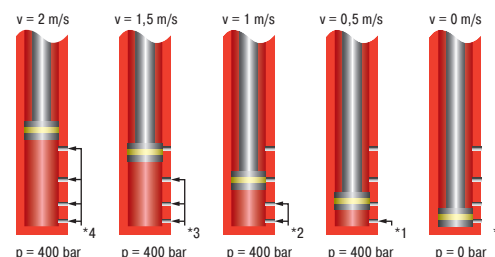

\* The load velocity reduces continuously as you travel through the stroke due to the reduction in the number of metering orifices (\*) in action. The internal pressure remains essentially constant and thus the Force vs. stroke curve remains linear.

## Calculation and design

In order to ensure an optimum, fault-free and durable function of the industrial shock absorbers they must be correctly dimensioned and designed. The following parameters must be known and used in the calculation:

- Moving mass [kg]
- Impact velocity of the mass into the shock absorber(s) [m/s]
- Additionally acting propelling force, propelling power or propelling torque [N, kW, Nm]
- Number of shock absorbers acting in parallel [n]
- Number of strokes or cycles per hour [1/h]

The correct size of the shock absorbers can be determined with the ACE online calculation programme at [www.ace-ace.de](http://www.ace-ace.de). You can also send us the completed online form via e-mail for checking.

Or make use of our free calculation service by phoning: +49 (0)2173 - 9226-20.

## WARNING

**!** The dampers must be dimensioned in such a way that the calculated values do not exceed the maximum values of the respective performance table (technical data):

$W_j$  [Nm/cycle]

$W_i$  [Nm/h]

Effective weight  $m_e$

Max. side load angle [°]

**!** For a correct damping design the shock absorber must represent the only braking system. Additional braking systems, such as a pneumatic end position damping length, must not overlap with the end position damping length by the shock absorber and must be disabled.

## Safety information

### WARNING

**!** If ACE industrial shock absorbers are used where a failure of the product could lead to personal injuries and/or material damage, additional safety elements must be implemented.

**!** Free-moving masses can lead to injuries by crushing during installation of the shock absorber. Secure moving masses against inadvertent starting with suitable safety precautions before installing the shock absorbers.

## Intended use

ACE industrial shock absorbers are used wherever moving masses are to be slowed down in a defined end position. The industrial shock absorbers are designed for force capacity in an axial direction. Within the permissible load limits the industrial shock absorber also acts as a stop.

## Description and function

The ACE industrial shock absorbers MC33-LT to MC64-LT are maintenance-free, ready-to-install hydraulic components with numerous metering openings.

During the slowing down process the moving mass moves with kinetic energy and, if necessary, an additional drive energy in the axial direction of the piston rod with a defined impact velocity against the rod end button of the shock absorber. Alternatively, numerous shock absorbers can also be used in parallel. During the initiated slowing down process the piston rod is pushed into the shock absorber. The hydraulic oil located before the piston is displaced through all metering orifices at the same time. The number of effective metering openings reduces in proportion to the driven stroke. The retraction speed reduces. The dynamic pressure applied in front of the piston corresponds to the counterforce applied by the shock absorber and remains approximately constant over

## Delivery and storage

- After delivery please check the shock absorber for any damage.
- The shock absorber can become damaged if it falls. Carefully remove shock absorber from the packaging.
- Shock absorbers can generally be stored in any position.
- Storage in the original packaging is preferred.
- Always store shock absorbers in a dry place in order to avoid oxidation.
- The recommended maximum storage time is three years.

## Maintenance and care

Regularly check the shock absorbers for oil loss, return of the piston rod and external damage.

Shock absorbers are machine elements that are subject to continuous wear. Increased service life results in reduced damping effect. If this is no longer sufficient, the shock absorbers must be replaced or exchanged as appropriate.

## Disassembly and disposal

Take account of environmental protection (recovery of problematic substances) during disposal of the shock absorber. The MC-LT industrial shock absorbers are filled with low temperature hydraulic oil. The corresponding data sheet is available on request.

Faulty dampers can be sent to our service department for determination of the cause of failure.

## Mounting instructions and mounting accessories

### Installation instructions

Before installation and use check whether the identification number on the damper or on the packaging matches the respective designation on the delivery note. Industrial shock absorbers are maintenance-free and ready to install.

**Operating temperature range:** -50 °C to +66 °C

**Mounting:** As required but always in such a way that the entire damper stroke is used. The dampers must always be mounted in such a way that the forces are introduced centrally over the piston rod. The maximum permissible side load angle (see table) must not be exceeded. If there is a side load angle, it generally leads to a reduction in service life. In the case of maximum permissible values being exceeded a side load adapter must be used.

**Self-compensating:** The MC range of shock absorbers is self-compensating. In a selectable range according to a table, the different effects of power, weight, temperature and speed balance out independently. The shock absorbers are divided into five hardness ranges (me min. to me max.) as standard. The grading ranges from -0 (very soft) to -4 (very hard).

### Commissioning


- After installation, start a test run of the moving mass at reduced operating speed to begin with.

### During the test run

- Gradually accelerate the load capacity up to the subsequent operating speed. You can find this in the calculation for your application. In the correct final setting, the piston rod of the shock absorber reaches the end position (positive stop) without a hard stop.

### Mounting accessories

Information on the corresponding mounting accessories can be found on the following pages.

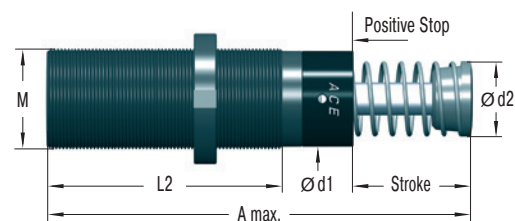

### Dimensions

TYPES	Stroke mm	A max. mm	d1 mm	d2 mm	L2 mm	M
MC3325EUM-LT	23.2	138	30	25	83	M33x1.5
MC3350EUM-LT	48.6	189	30	25	108	M33x1.5

### Performance data

TYPES	Max. Energy Capacity		Effective Weight			Return Time <sup>2</sup> s	Side Load Angle max. °	Weight kg
	W <sub>3</sub> Nm/cycle	W <sub>4</sub> Nm/h	<sup>1</sup> me min. kg	<sup>1</sup> me max. kg	Hardness			
MC3325EUM-0-LT	170	75,000	3	11	-0	0.08	4	0.51
MC3325EUM-1-LT	170	75,000	9	40	-1	0.08	4	0.51
MC3325EUM-2-LT	170	75,000	30	120	-2	0.08	4	0.51
MC3325EUM-3-LT	170	75,000	100	420	-3	0.08	4	0.51
MC3325EUM-4-LT	170	75,000	350	1,420	-4	0.08	4	0.51
MC3350EUM-0-LT	330	85,000	5	22	-0	0.16	3	0.63
MC3350EUM-1-LT	330	85,000	18	70	-1	0.16	3	0.63
MC3350EUM-2-LT	330	85,000	60	250	-2	0.16	3	0.63
MC3350EUM-3-LT	330	85,000	240	840	-3	0.16	3	0.63
MC3350EUM-4-LT	330	85,000	710	2,830	-4	0.16	3	0.63

<sup>1</sup> The effective weight range limits can be raised or lowered on request.

<sup>2</sup> at -50 °C

<sup>3</sup> If side load angle is higher contact ACE.

**WARNING**

- Temperature effect: The W<sub>3</sub> and me values given in the performance table (see manual or catalogue) are valid for room temperature. Deviating values apply to higher temperatures.
- During installation of the dampers moving masses can lead to injuries due to inadvertent starting. Secure moving masses against inadvertent moving.
- The dampers may be unsuitable for use and have an insufficient damping effect. Check the specific suitability of the dampers before installation.
- If operated outside of the operating temperature range, the damper can lose its function. Operating temperature range must be maintained. Do not paint dampers due to heat emission.
- Fluids, gases and dirt particles in the surrounding area can attack or destroy the seal system of the damper and cause it to fail. Protect or encapsulate piston rod and seal system from external materials in the surrounding area.
- Damage to the piston rod surface can destroy the seal system. Do not grease, oil piston rod etc. and protect against dirt particles.
- The piston rod can be torn from the damper. Do not load the piston rod with tensile stress.
- Damper can tear off upon impact. Always lay out the connection structure in such a way that the maximum occurring forces can be absorbed with sufficient safety. The maximum reacting forces listed in the calculation range may deviate from the actually occurring reacting forces, as these are based on theoretical values.

### Packaging disposal

Please dispose of the transportation packaging in an environmentally-friendly manner. Recycling packaging materials saves raw materials and reduces waste. The packaging materials do not contain any prohibited materials.

## Mounting instructions and mounting accessories

### M33x1.5 mounting accessories

#### MC33-LT

Before installation check whether the identification number on the packaging matches the respective designation on the delivery note.

Note the dimensioning for mounting when using accessory parts. Bolts for fitting of accessories are not included.


If you have any questions, please phone +49 (0)2173 - 9226-20 for free advice.

mounting instructions for accessories delivered separately.

When using accessory parts and mounting elements also note the

#### C33

Clevis Mounting Kit

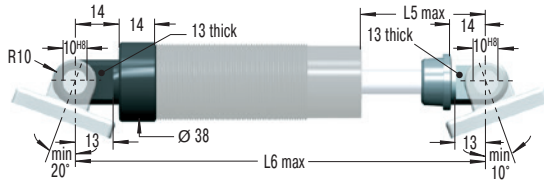


#### Dimensions

TYPES	L5 max. mm	L6 max. mm
MC, MA, ML3325EUM	39	168
MC, MA, ML3350EUM	64	218


#### SF33

Clevis Flange

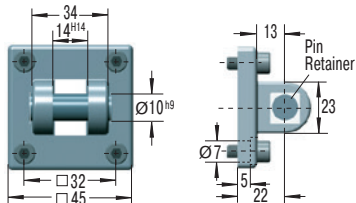



#### QF33

Square Flange

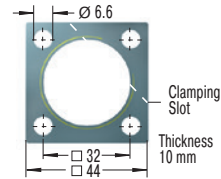

#### S33

Side Foot Mounting Kit

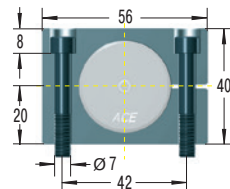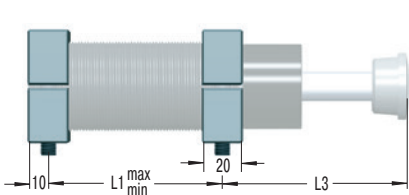


#### Dimensions

TYPES	L1 min. mm	L1 max. mm	L3 mm
MC, MA, ML3325EUM	25	60	68
MC, MA, ML3350EUM	32	86	93


### Mounting types

#### Mounting with Square Flange QF

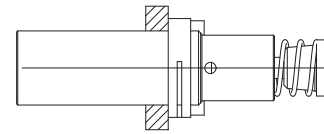


If mounted with 4 bolts  
Torque max.: 11 Nm  
Clamping torque: > 90 Nm

#### Mounting of damper in borehole with two locking rings

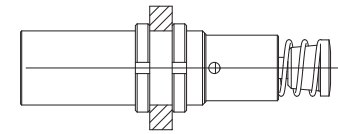


Torque: 80 Nm

#### Mounting with Foot Mount S

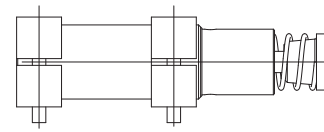


S33 = 2 flange + 4 bolts M6x40, DIN 912  
Because of the thread pitch the fixing holes for the second foot mount should only be drilled and tapped after the first foot mount has been fixed in position.  
Torque max.: 11 Nm (bolt)  
Clamping torque: 90 Nm

#### Screwing the damper into a threaded hole with additional locking ring

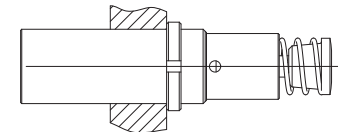

Torque: 80 Nm

#### Mounting with Clevis Mounting Kit C



C33 = 2 clevis eyes. Delivered assembled to shock absorber.  
Use positive stop at both ends of travel.

SF33 = flange + 4 bolts M6x20, DIN912  
Torque max.: 7,5 Nm  
**Secure with pin or use additional bar. Due to limited force absorption, the respective suitability should be reviewed by ACE.**

## Mounting instructions and mounting accessories

### Installation instructions

Before installation and use check whether the identification number on the damper or on the packaging matches the respective designation on the delivery note. Industrial shock absorbers are maintenance-free and ready to install.

**Operating temperature range:** -50 °C to +66 °C

**Mounting:** As required but always in such a way that the entire damper stroke is used. The dampers must always be mounted in such a way that the forces are introduced centrally over the piston rod. The maximum permissible side load angle (see table) must not be exceeded. If there is a side load angle, it generally leads to a reduction in service life. In the case of maximum permissible values being exceeded a side load adapter must be used.

**Self-compensating:** The MC range of shock absorbers is self-compensating. In a selectable range according to a table, the different effects of power, weight, temperature and speed balance out independently. The shock absorbers are divided into five hardness ranges (me min. to me max.) as standard. The grading ranges from -0 (very soft) to -4 (very hard).

### Commissioning


- After installation, start a test run of the moving mass at reduced operating speed to begin with.

### During the test run

- Gradually accelerate the load capacity up to the subsequent operating speed. You can find this in the calculation for your application. In the correct final setting, the piston rod of the shock absorber reaches the end position (positive stop) without a hard stop.

### Mounting accessories

Information on the corresponding mounting accessories can be found on the following pages.

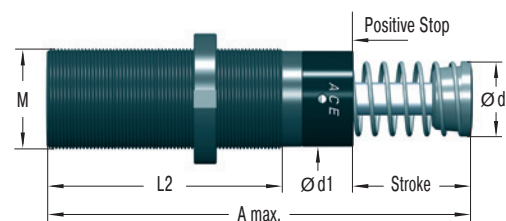

### Dimensions

TYPES	Stroke mm	A max. mm	d1 mm	d2 mm	L2 mm	M
MC4525EUM-LT	23.1	145	42	35	95	M45x1.5
MC4550EUM-LT	48.5	195	42	35	120	M45x1.5
MC4575EUM-LT	73.9	246	42	35	145	M45x1.5

### Performance data









TYPES	Max. Energy Capacity		Effective Weight			Return Time	Side Load Angle max. °	Weight kg
	W <sub>3</sub> Nm/cycle	W <sub>4</sub> Nm/h	<sup>1</sup> me min. kg	<sup>1</sup> me max. kg	Hardness			
MC4525EUM-0-LT	370	107,000	7	27	-0	0.08	4	1.14
MC4525EUM-1-LT	370	107,000	20	90	-1	0.08	4	1.14
MC4525EUM-2-LT	370	107,000	80	310	-2	0.08	4	1.14
MC4525EUM-3-LT	370	107,000	260	1,050	-3	0.08	4	1.14
MC4525EUM-4-LT	370	107,000	890	3,540	-4	0.08	4	1.14
MC4550EUM-0-LT	740	112,000	13	54	-0	0.16	3	1.36
MC4550EUM-1-LT	740	112,000	45	180	-1	0.16	3	1.36
MC4550EUM-2-LT	740	112,000	150	620	-2	0.16	3	1.36
MC4550EUM-3-LT	740	112,000	520	2,090	-3	0.16	3	1.36
MC4550EUM-4-LT	740	112,000	1,800	7,100	-4	0.16	3	1.36
MC4575EUM-0-LT	1,130	146,000	20	80	-0	0.24	2	1.59
MC4575EUM-1-LT	1,130	146,000	70	270	-1	0.24	2	1.59
MC4575EUM-2-LT	1,130	146,000	230	930	-2	0.24	2	1.59
MC4575EUM-3-LT	1,130	146,000	790	3,140	-3	0.24	2	1.59
MC4575EUM-4-LT	1,130	146,000	2,650	10,600	-4	0.24	2	1.59

<sup>1</sup> The effective weight range limits can be raised or lowered on request.

<sup>2</sup> at -50 °C

<sup>3</sup> If side load angle is higher contact ACE.

**WARNING**

-  **Temperature effect:** The W<sub>3</sub> and me values given in the performance table (see manual or catalogue) are valid for room temperature. Deviating values apply to higher temperatures.
-  **During installation of the dampers moving masses can lead to injuries due to inadvertent starting. Secure moving masses against inadvertent moving.**
-  **The dampers may be unsuitable for use and have an insufficient damping effect. Check the specific suitability of the dampers before installation.**
-  **If operated outside of the operating temperature range, the damper can lose its function. Operating temperature range must be maintained. Do not paint dampers due to heat emission.**
-  **Fluids, gases and dirt particles in the surrounding area can attack or destroy the seal system of the damper and cause it to fail. Protect or encapsulate piston rod and seal system from external materials in the surrounding area.**
-  **Damage to the piston rod surface can destroy the seal system. Do not grease, oil piston rod etc. and protect against dirt particles.**
-  **The piston rod can be torn from the damper. Do not load the piston rod with tensile stress.**
-  **Damper can tear off upon impact. Always lay out the connection structure in such a way that the maximum occurring forces can be absorbed with sufficient safety. The maximum reacting forces listed in the calculation range may deviate from the actually occurring reacting forces, as these are based on theoretical values.**

### Packaging disposal

Please dispose of the transportation packaging in an environmentally-friendly manner. Recycling packaging materials saves raw materials and reduces waste. The packaging materials do not contain any prohibited materials.

## Mounting instructions and mounting accessories

### M45x1.5 mounting accessories

mounting instructions for accessories delivered separately.

#### MC45-LT

Before installation check whether the identification number on the packaging matches the respective designation on the delivery note.


Note the dimensioning for mounting when using accessory parts. Bolts for fitting of accessories are not included.

If you have any questions, please phone +49 (0)2173 - 9226-20 for free advice.

When using accessory parts and mounting elements also note the

#### C45

Clevis Mounting Kit

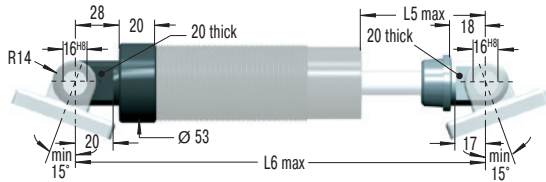


#### Dimensions

TYPES	L5 max.	L6 max.
	mm	mm
MC, MA, ML4525EUM	43	200
MC, MA, ML4550EUM	68	250
MC, MA4575EUM	93	301


#### SF45

Clevis Flange

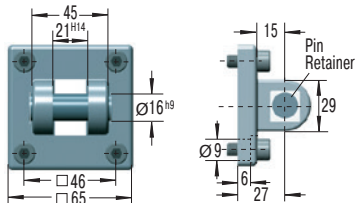


#### QF45

Square Flange

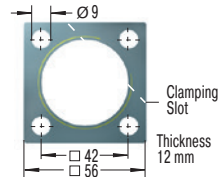

#### S45

Side Foot Mounting Kit

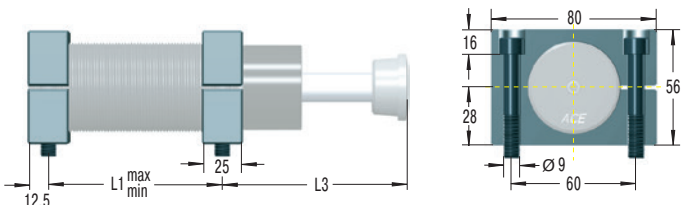


#### Dimensions

TYPES	L1 min.	L1 max.	L3
	mm	mm	mm
MC, MA, ML4525EUM	32	66	66
MC, MA, ML4550EUM	40	92	91
MC, MA4575EUM	50	118	116


### Mounting types

#### Mounting with Square Flange QF

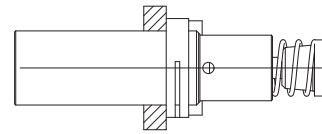


If mounted with 4 bolts  
Torque max.: 27 Nm  
Clamping torque: > 200 Nm

#### Mounting of damper in borehole with two locking rings

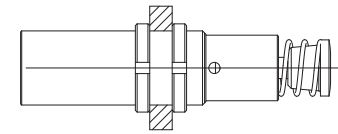


Torque: 235 Nm

#### Mounting with Foot Mount S

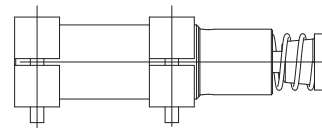


S45 = 2 flange + 4 bolts M8x50, DIN 912  
Because of the thread pitch the fixing holes for the second foot mount should only be drilled and tapped after the first foot mount has been fixed in position.  
Torque max.: 27 Nm (bolt)  
Clamping torque: 350 Nm

#### Screwing the damper into a threaded hole with additional locking ring

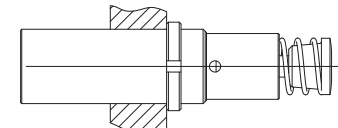

Torque: 235 Nm

#### Mounting with Clevis Mounting Kit C



C45 = 2 clevis eyes. Delivered assembled to shock absorber.  
Use positive stop at both ends of travel.

SF45 = flange + 4 bolts M8x20, DIN912  
Torque max.: 7,5 Nm  
**Secure with pin or use additional bar. Due to limited force absorption, the respective suitability should be reviewed by ACE.**

## Mounting instructions and mounting accessories

### Installation instructions

Before installation and use check whether the identification number on the damper or on the packaging matches the respective designation on the delivery note. Industrial shock absorbers are maintenance-free and ready to install.

**Operating temperature range:** -50 °C to +66 °C

**Mounting:** As required but always in such a way that the entire damper stroke is used. The dampers must always be mounted in such a way that the forces are introduced centrally over the piston rod. The maximum permissible side load angle (see table) must not be exceeded. If there is a side load angle, it generally leads to a reduction in service life. In the case of maximum permissible values being exceeded a side load adapter must be used.

**Self-compensating:** The MC range of shock absorbers is self-compensating. In a selectable range according to a table, the different effects of power, weight, temperature and speed balance out independently. The shock absorbers are divided into five hardness ranges (me min. to me max.) as standard. The grading ranges from -0 (very soft) to -4 (very hard).

### Commissioning


- After installation, start a test run of the moving mass at reduced operating speed to begin with.

### During the test run

- Gradually accelerate the load capacity up to the subsequent operating speed. You can find this in the calculation for your application. In the correct final setting, the piston rod of the shock absorber reaches the end position (positive stop) without a hard stop.

### Mounting accessories

Information on the corresponding mounting accessories can be found on the following pages.

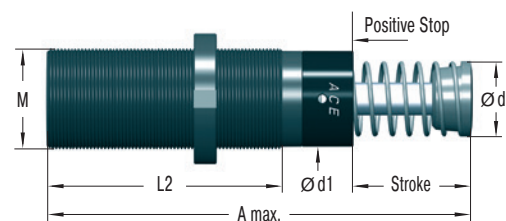

### Dimensions

TYPES	Stroke mm	A max. mm	d1 mm	d2 mm	L2 mm	M
MC6450EUM-LT	48.6	225	60	48	140	M64x2
MC64100EUM-LT	99.4	326	60	48	191	M64x2
MC64150EUM-LT	150	450	60	48	241	M64x2

### Performance data

TYPES	Max. Energy Capacity		Effective Weight			Return Time s	Side Load Angle max. °	Weight kg
	W <sub>3</sub> Nm/cycle	W <sub>4</sub> Nm/h	<sup>1</sup> me min. kg	<sup>1</sup> me max. kg	Hardness			
MC6450EUM-0-LT	1,870	146,000	35	140	-0	0.24	4	2.9
MC6450EUM-1-LT	1,870	146,000	140	540	-1	0.24	4	2.9
MC6450EUM-2-LT	1,870	146,000	460	1,850	-2	0.24	4	2.9
MC6450EUM-3-LT	1,870	146,000	1,600	6,300	-3	0.24	4	2.9
MC6450EUM-4-LT	1,870	146,000	5,300	21,200	-4	0.24	4	2.9
MC64100EUM-0-LT	3,730	192,000	70	280	-0	0.68	3	3.7
MC64100EUM-1-LT	3,730	192,000	270	1,100	-1	0.68	3	3.7
MC64100EUM-2-LT	3,730	192,000	930	3,700	-2	0.68	3	3.7
MC64100EUM-3-LT	3,730	192,000	3,150	12,600	-3	0.68	3	3.7
MC64100EUM-4-LT	3,730	192,000	10,600	42,500	-4	0.68	3	3.7
MC64150EUM-0-LT	5,650	248,000	100	460	-0	0.96	2	5.1
MC64150EUM-1-LT	5,650	248,000	410	1,640	-1	0.96	2	5.1
MC64150EUM-2-LT	5,650	248,000	1,390	5,600	-2	0.96	2	5.1
MC64150EUM-3-LT	5,650	248,000	4,700	18,800	-3	0.96	2	5.1
MC64150EUM-4-LT	5,650	248,000	16,000	63,700	-4	0.96	2	5.1

<sup>1</sup> The effective weight range limits can be raised or lowered on request.

<sup>2</sup> at -50 °C

<sup>3</sup> If side load angle is higher contact ACE.

**WARNING**

- Temperature effect:** The W<sub>3</sub> and me values given in the performance table (see manual or catalogue) are valid for room temperature. Deviating values apply to higher temperatures.
- During installation of the dampers moving masses can lead to injuries due to inadvertent starting. Secure moving masses against inadvertent moving.**
- The dampers may be unsuitable for use and have an insufficient damping effect. Check the specific suitability of the dampers before installation.**
- If operated outside of the operating temperature range, the damper can lose its function. Operating temperature range must be maintained. Do not paint dampers due to heat emission.**
- Fluids, gases and dirt particles in the surrounding area can attack or destroy the seal system of the damper and cause it to fail. Protect or encapsulate piston rod and seal system from external materials in the surrounding area.**
- Damage to the piston rod surface can destroy the seal system. Do not grease, oil piston rod etc. and protect against dirt particles.**
- The piston rod can be torn from the damper. Do not load the piston rod with tensile stress.**
- Damper can tear off upon impact. Always lay out the connection structure in such a way that the maximum occurring forces can be absorbed with sufficient safety. The maximum reacting forces listed in the calculation range may deviate from the actually occurring reacting forces, as these are based on theoretical values.**

### Packaging disposal

Please dispose of the transportation packaging in an environmentally-friendly manner. Recycling packaging materials saves raw materials and reduces waste. The packaging materials do not contain any prohibited materials.

## Mounting instructions and mounting accessories

### M64x2 mounting accessories

#### MC64-LT

Before installation check whether the identification number on the packaging matches the respective designation on the delivery note.

Note the dimensioning for mounting when using accessory parts. Bolts for fitting of accessories are not included.


If you have any questions, please phone +49 (0)2173 - 9226-20 for free advice.

mounting instructions for accessories delivered separately.

When using accessory parts and mounting elements also note the

#### C64

Clevis Mounting Kit

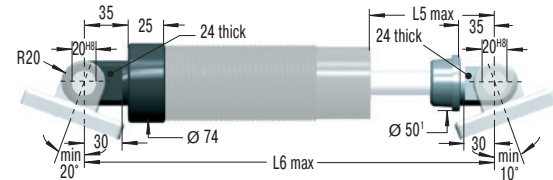


<sup>1</sup> With 150 mm stroke Dia. 60 mm. Order C64-150.

#### Dimensions

TYPES	L5 max. mm	L6 max. mm
ML6425EUM	60	260
MC, MA, ML6450EUM	85	310
MC, MA64100EUM	136	410
MC, MA64150EUM	187	530


#### SF64

Clevis Flange

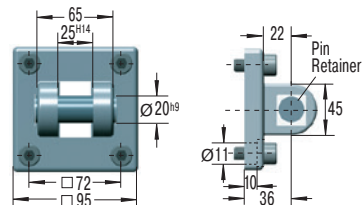


#### QF64

Square Flange

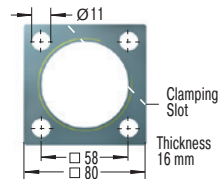


#### QF90

Square Flange

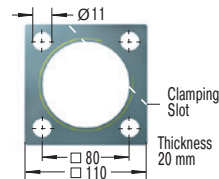

#### S64

Side Foot Mounting Kit

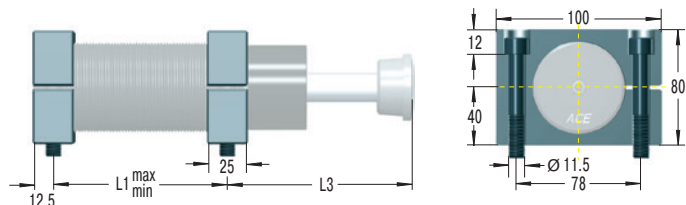


#### Dimensions

TYPES	L1 min. mm	L1 max. mm	L3 mm
ML6425EUM	40	86	75.5
MC, MA, ML6450EUM	50	112	100
MC, MA64100EUM	64	162	152
MC, MA64150EUM	80	212	226


### Mounting types

#### Mounting with Square Flange QF

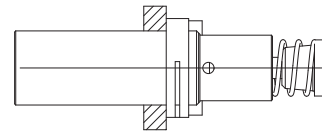


If mounted with 4 bolts  
Torque max.: 50 Nm  
Clamping torque: > 210 Nm

#### Mounting of damper in borehole with two locking rings

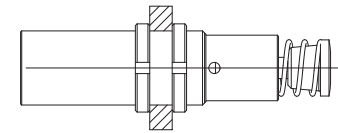


Torque: 780 Nm

#### Mounting with Foot Mount S

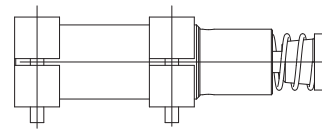


S64 = 2 flange + 4 bolts M10x80, DIN 912  
Because of the thread pitch the fixing holes for the second foot mount should only be drilled and tapped after the first foot mount has been fixed in position.  
Torque max.: 50 Nm (bolt)  
Clamping torque: 350 Nm

#### Screwing the damper into a threaded hole with additional locking ring

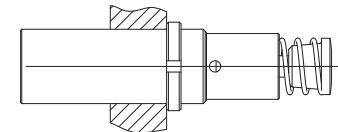

Torque: 780 Nm

#### Mounting with Clevis Mounting Kit C



C64 = 2 clevis eyes. Delivered assembled to shock absorber.  
Use positive stop at both ends of travel.

SF64 = flange + 4 bolts M10x20, DIN912  
Torque max.: 15 Nm  
**Secure with pin or use additional bar. Due to limited force absorption, the respective suitability should be reviewed by ACE.**



## Manual

### Warranty

Fundamentally, all modifications to the product by third parties lead to exclusion from the warranty.

Obvious defects must be reported to the vendor in writing immediately after delivery, no later than one week, but in any case before processing or installation, otherwise the assertion of a warranty claim is excluded. A timely dispatch is sufficient to keep the term.

The vendor is to be given an opportunity to check on site. If the complaint is justified the vendor offers warranty by repair or replacement at its own discretion. If the rectification fails, the buyer may choose to demand reduction of payment or cancellation of the contract. If there is only a minor lack of conformity, particularly with only minor defects, the buyer nevertheless has a right of withdrawal.

If, after failed rectification, the buyer chooses to cancel the contract due to a defect of title or material defect, they are not entitled to additionally claim for damages.

If, after failed fulfilment, the buyer chooses compensation, the goods remain with the buyer, if this is reasonable. The compensation is limited to the difference between the purchase price and the value of the defective item. This does not apply if the vendor maliciously causes the breach of contract.

The quality of the goods is only considered as agreed upon with the product description of the vendor. Public statements, claims or advertising of the manufacturer do not represent an additional contractual specification of quality of the goods.

If the buyer receives defective mounting instructions, the buyer is only obligated to deliver defect-free mounting instructions and only if the defect to the mounting instructions prevents proper mounting.

The warranty period is two years and begins upon completion. Exchange and return of custom products are fundamentally excluded. The factory conditions of the manufacturing factory apply to parts not manufactured and processed by the vendor, which can be viewed by the orderer at the vendor at any time. Construction and installation parts are delivered according to the present standard of engineering.

### Service life

In general industrial shock absorbers are machine elements that are subject to wear. Wear parts such as seals, pressure chambers and pistons are excluded from the general warranty. The wear of seals is largely dependent upon the operating conditions and the respective application and its operating parameters.

In general with this model of industrial shock absorber with grooved ring wiper seal system an average service life of three to five million load changes can be expected. Adverse environmental and operating conditions can significantly reduce the expected service life.

### Technical data

**Energy capacity:** 170 Nm/cycle to 5,650 Nm/cycle

**Impact velocity range:** 0.15 m/s to 5 m/s (depending on type and calculation of effective weight). Other speeds on request.

**Operating temperature range:** -50 °C to +66 °C

**Mounting:** in any position

**Positive stop:** integrated

<b>Material:</b> Outer body:	Nitride hardened steel;
Piston rod:	Hard chrome plated steel
Piston rod seal:	NBR
Rod end button:	Steel hardened and corrosion-resistant coating
Return spring:	Zinc plated or plastic-coated steel;
Accessories:	Steel with black oxide finish or nitride hardened

#### Permissible torque of locknut:

MC33-LT: 80 Nm

MC45-LT: 235 Nm

MC64-LT: 780 Nm

**Damping medium:** Low temperature hydraulic oil

**Application field:** Linear slides, Swivel units, Turntables, Machines and plants, Tool machines, Machining centres, Z-axes

**Note:** A noise reduction of 3 to 7 dB is possible when using the special impact button (PP).

**Safety instructions:** External materials in the surrounding area can attack the sealing components and lead to a shorter service life. Please contact ACE for appropriate solution suggestions. Do not paint the shock absorbers due to heat emission.

**On request:** Nickel-plated, increased corrosion protection, mounting inside air cylinders or other special options are available on request. Adjustable HT and LT shock absorbers.